


Unfors Mult-O-Meter Quick Guide


1

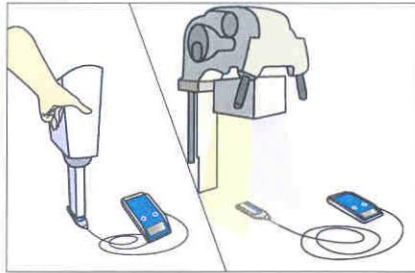

Position the sensor


Keep the sensor plane parallel to the X-ray source within 10%.

2

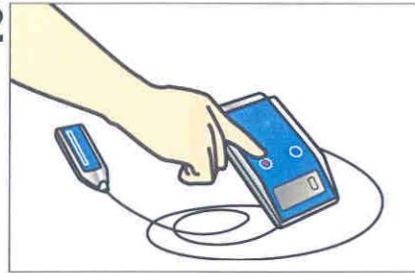

Turn the meter ON

3

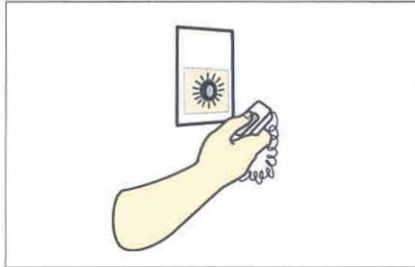

Make an exposure


No exposure should be made while the meter display "CALC".

4



Read the results in the display


Press PARAMETER key to scroll the measured values or study your MS Excel template (IR link).

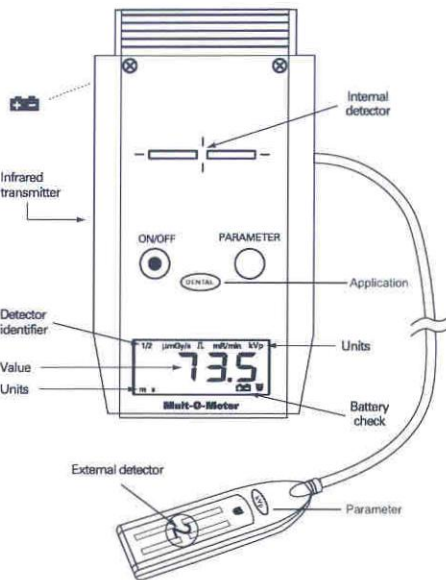

1. Remove the two screws on the left side of the instrument and remove the side panel.


2.Remove the battery and install a new one (type 9V IEC6F22).

Press and hold the **PARAMETER** key > 3 s while you turn **ON** the instrument.

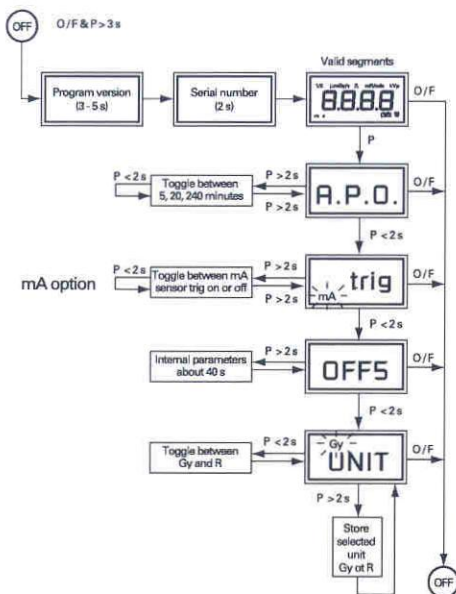

O/F = Press the ON/OFF key
P = Press the PARAMETER key

Press and hold the **PARAMETER** key > 4 s, when the corresponding parameter is in the display.

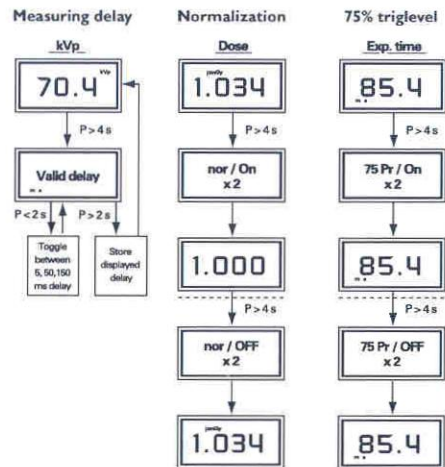

P = Press the PARAMETER key
x2 = Flashing twice